

---

## Programming —Keyless Entry Keypad

1. Enter the permanent factory keyless entry keypad code.
  2. Press the 1/2 button within 5 seconds to activate the programming mode. Holding the 1/2 button for more than two seconds will erase all stored customer codes. The door locks will lock, then unlock, confirming the codes are erased. The existing codes do not need to be erased to program new codes.
  3. Enter the new 5 digit keyless entry keypad code.
  4. To associate the new code with personality position 1 or 2, press the 1/2 button within 7.5 seconds of entering the 5th digit of the new code for position 1 or 3/4 button for position 2. The door locks will lock and unlock confirming the new code is programmed.
  5. If another code is to be programmed, begin entering the code within 7.5 seconds of the last button press.
  6. After all new keyless entry codes are programmed:
    - Transmitters can be programmed within 7.5 seconds of the last keypad code entered.
    - Press keyless entry keypad buttons 7/8 and 9/0 at the same time to exit program mode.
    - Wait for 7.5 seconds; the driver door module (DDM) will exit program mode automatically.
-